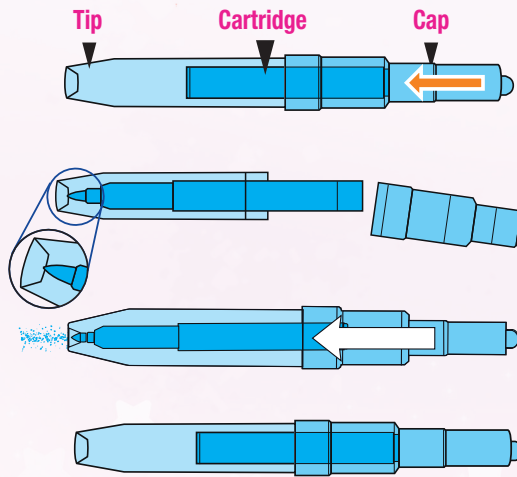


BLOpens


INSTRUCTIONS

Fantasy Super Activity Workshop

HOW TO USE BLOPENS

- 
- 1 The Blopens comes with the cartridge in storage position.
 - 2 Remove the cartridge and place the marker in the tip. Then, put the cap back.
 - 3 Point the Blopens and blow into the cap to spray the paper.
 - 4 Always place the Blopens cartridge back in its initial position when stored.

HOW TO BUILD YOUR EASEL BOX

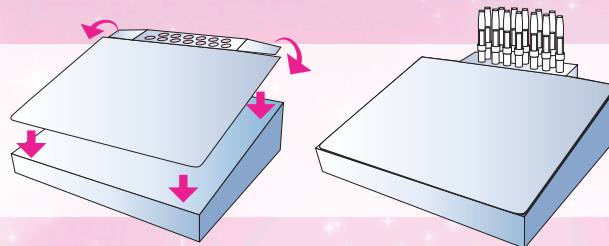

USING AND CLEANING

Before starting, gently remove the detachable parts of the stencil (if necessary). Blow at a distance of at least 8 to 10 cm from the paper. Never put the tip or the ink cartridge in the mouth. Take breaks between each use. Rinse the tips and caps between each use and let dry for a few minutes. Non-rechargeable. Blopens may stain. We suggest wearing an apron and protecting your furniture and carpets. Stains on skin and fabric can be cleaned with soap. Avoid prewash products that may stain. For tougher stains fabric may have to soak overnight in soap and water. An additional washing may be necessary for the persistent stains. In order to avoid any discoloration, follow the instructions provided by the soap or detergent product manufacturer. Avoid chlorine, chemical cleaners and biological washing powders.

Lansay

112 quai de Bezons
95100 Argenteuil - FRANCE
www.lansay.fr

BLOPENS® is a registered trademark of JAKKS Pacific, Inc. and is used with permission.
©2020 JAKKS Pacific, Inc. All Rights Reserved.
Licensed by JAKKS Pacific, Inc.

Réf : 23457



Warning!



Contains small parts. Choking hazard.

Please remove all plastic tags, ties, and any other protective elements which do not make up part of the toy, before giving it to the child. Please retain information for future reference. Colors and contents may vary from those shown. Do not aim for eyes and face. In case of contact with the eyes, rinse thoroughly with clear water and consult a doctor bringing the product with you. Should not be inhaled. Wash hands thoroughly after use.